

MAKE: FORD

MODEL: TRANSIT CUSTOM

TYPE: VAN

YEARS OF MANUFACTURE: 04/2024

PART NUMBER: CBFTC24

POSITION: BEHIND 1ST ROW



KIT:

- ☐ 2 x 325MM BRACKET
- ☐ 2 x 29 Z MM BRACKET
- ☐ 2 x M10 PLATE ON WIRE
- ☐ 8 x M10x20 SET SCREW
- ☐ 4 x M10 WHIZ NUT
- ☐ 2 x 300MM CABLE TIE

Your kit was packed by: _____

- **MINIMUM 2 PEOPLE REQUIRED FOR INSTALLATION**
- **ALWAYS CHECK FOR FUEL LINES, ELECTRICAL CABLING, ETC BEFORE PERFORMING INSTALLATION**
- **TAKE THE NECESSARY PRECAUTIONS TO PREVENT INJURY OR DAMAGE CAUSED BY SLIPPERY SURFACES**
- **USE CORRECT LIFTING PROCEDURES**
- **WARNING! POTENTIAL CRUSH HAZARD**



VIC

25 Kalman Drive
Boronia VIC 3155 Australia

NSW

376 Hoxton Park Road
Prestons NSW 2170 Australia

Tel: 1800 FLEET FIT (353 383)
autosafe.com.au

1. Install rubber carpet/mat to prevent damage to the floor and prevent sliding of the barrier when in the vehicle.
2. Remove cargo tie points on the lower corners of the partition.



3. Install 29 Z brackets into the removed cargo tie point locations.
 - a. Use the M10x20 set screw to fasten it into place
 - b. Keep loose for adjustment
 - c. Repeat on the opposite side




VIC
25 Kalman Drive
Boronia VIC 3155 Australia

NSW
376 Hoxton Park Road
Prestons NSW 2170 Australia

Tel: 1800 FLEET FIT (353 383)
autosafe.com.au

4. Insert M10 Plate on Wire into the slot and line it up with the marked hole.

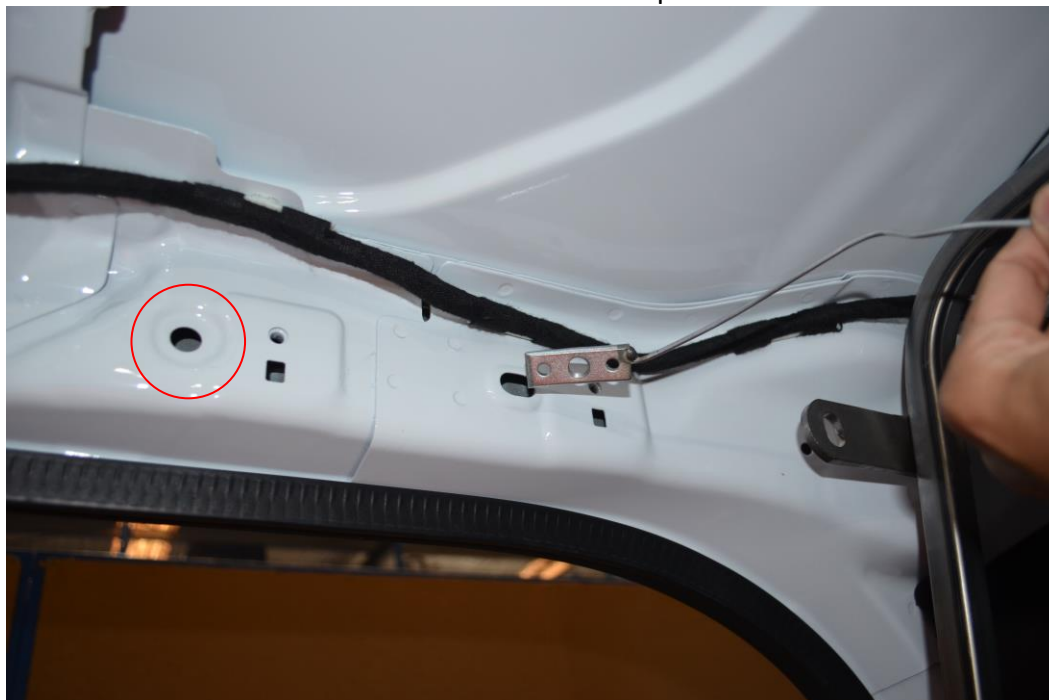

5. Fasten the 325mm bracket to the M10 Plate.
 - a. Use M10 set screw to fasten
 - b. Keep loose for adjustment
 - c. Repeat on the opposite side



VIC
25 Kalman Drive
Boronia VIC 3155 Australia

NSW
376 Hoxton Park Road
Prestons NSW 2170 Australia

Tel: 1800 FLEET FIT (353 383)
autosafe.com.au

6. Carefully place the cargo barrier in the van.
 - a. Ensure the bend is pointing towards the front of the van



7. Cable tie the cargo barrier to the existing grill to hold it in position while performing the installation.



VIC
25 Kalman Drive
Boronia VIC 3155 Australia

NSW
376 Hoxton Park Road
Prestons NSW 2170 Australia

Tel: 1800 FLEET FIT (353 383)
autosafe.com.au

8. Fasten the 325mm bracket to the upper tags of the cargo barrier, on the outer face.
 - a. Use M10 set screw and M10 Whiz nut to fasten
 - b. Keep loose for adjustment
 - c. Repeat on the opposite side



9. Fasten the lower tag of the cargo barrier to the 29 Z bracket.
 - a. Use M10 set screw and M10 Whiz nut to fasten
 - b. Keep loose for adjustment
 - c. Repeat on the opposite side



10. Centre the barrier and tighten all the fasteners fully to ensure the barrier is secure.
 - a. Remove cable ties after all bolts are fully tightened



VIC
25 Kalman Drive
Boronia VIC 3155 Australia

NSW
376 Hoxton Park Road
Prestons NSW 2170 Australia

Tel: 1800 FLEET FIT (353 383)
autosafe.com.au